



D 40




Нижний
рейл




Верхний
рейл

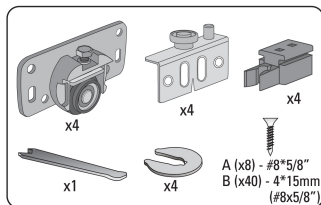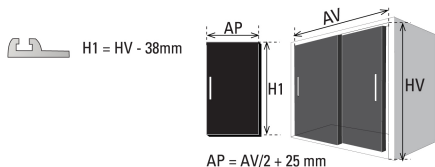


1

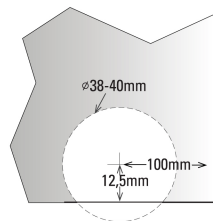

2

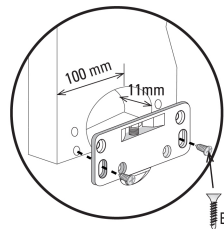


3

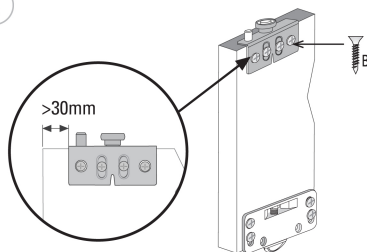


4


Перед установкой вставьте стопоры в направляющие.

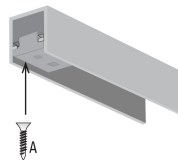

Все размеры указаны в миллиметрах


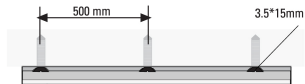


5

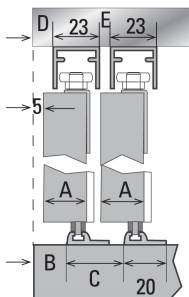

| A | B | C | D | E |
|------|------|------|------|------|
| 15mm | 9mm | 21mm | 2mm | 0mm |
| 18mm | 12mm | 24mm | 5mm | 3mm |
| 20mm | 14mm | 26mm | 7mm | 5mm |
| 22mm | 16mm | 28mm | 9mm | 7mm |
| 25mm | 19mm | 31mm | 12mm | 10mm |
| 30mm | 24mm | 36mm | 17mm | 15mm |
| 32mm | 26mm | 38mm | 19mm | 17mm |
| 35mm | 29mm | 41mm | 22mm | 20mm |
| 40mm | 34mm | 46mm | 27mm | 25mm |
| 42mm | 36mm | 48mm | 29mm | 27mm |
| 45mm | 39mm | 51mm | 32mm | 30mm |
| 47mm | 41mm | 53mm | 34mm | 32mm |

6

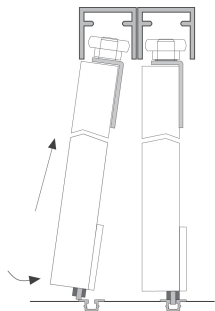

7

